

User Manual **N DOR**





1. Precautions before installation

Describes basic precautions that users should be aware of when installing and using the product in case of a situation that may cause bodily harm. Therefore, before installing or using the product, be sure to familiarize yourself with the information described here.

General precautions

During and after installation of the product, the area around the product must be kept clean and dust-free.

Do not leave tools, cables, etc. in the aisle, as this may result in personal injury.

When installing the product, avoid wearing loose-fitting clothes, neckties, scarves, or sleeves that may get caught in the product.

Do not take any action that could cause damage to persons or equipment.

If you need to open the cover of the product to extend the product's performance or repair a malfunction, be sure to contact the place of purchase for professional help.

Power Precautions

When connecting power to the product, first check that the wiring is not overloaded.

When connecting the power to the product, do not wear jewelry such as rings, necklaces, or watches. If these accessories are connected to a power source or ground, there is a risk of burning the parts.

Always check the work area for potential hazards. Be sure to check for wet floors, ungrounded power extension cables,

frayed internal power cords, and floors that do not have a safety grounding facility.

There must be an outlet near the appliance and the outlet must be easily accessible.

Install by service personnel and install the appliance so that it is connected to a socket-outlet with a protective earth wire



Before proceeding with hardware installation, turn off the power of the system to be installed, and then touch a grounded surface such as the metal side of the power supply to discharge static electricity from the body.

The manufacturer assumes no liability for direct or indirect damage resulting from the use of improper parts by unauthorized service personnel.

If power is supplied during installation, it may cause damage to system components and body.

Power

The power cord and power outlet act as the main power disconnect device in case of an emergency such as a fire, so do not stack or block objects in front of the power outlet so that you can unplug the power cord from the power outlet at any time.



FC

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CE

CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.





1. INTRODUCTION

NDOR is an H.264/HEVC encoder, streamer, and recorder capable of NDI HX2/3, SRT, RTMP streaming, and lightweight MP4 recording. By selecting a device with these capabilities, you can efficiently manage and stream two simultaneous video streams from HDMI and SDI inputs, ensure high-quality output, record in MP4 format, and share recordings via SAMBA, facilitating easy access and collaboration over the network.

| 2.7" LCD | Displaying the real-time encoding screen allows for the most intuitive monitoring of any video or audio issues during broadcasting. Being able to visually confirm whether recording, streaming, or encoding is in progress taps into a basic human instinct. |
|---|--|
| 4K 30P Encoding | To encode H.264/HEVC video and AAC audio at up to 4K resolution from HDMI and SDI inputs, specialized equipment is needed. These encoders are essential in various fields such as broadcasting, streaming, and video production. |
| Dual Stream Capability | Supports various streaming protocols like RTMP, SRT and NDI HX2/3, allowing for live streaming to platforms such as YouTube, Facebook. Capable of streaming to two different platforms simultaneously. |
| Auto Lip-Sync | Have you experienced audio and video lip-sync issues during long streaming sessions? During 3-4 days of streaming, if lip-sync issues occur, our algorithm automatically re-syncs the audio and video to correct the problem. |
| Recording | Can record the encoded streams in MP4 format, which is widely compatible and convenient for USB, SD and Shared Network Storages. Supports sharing recorded files via SAMBA, allowing external PCs to access, view, and share recordings over the network |
| Professional Audio Standard | Balanced audio cables reduce the noise picked up over long cable runs and can run cables over much longer distances without significant degradation of the audio signal. The use of balanced audio ensures higher quality, more reliable, and noise-resistant audio transmission, making it ideal for professional and high-fidelity applications. |
| Co-devleoped H.264/HEV C + NPU RISC-V Based SOC | Inside, there is a RISC V-based H.264/HEVC encoder/decoder and an NPU chip, co-developed in Korea. This chip, equipped with 8 cores, enables fast computations and encodes video quality up to 4K30P. |
| WEB SERVER | The Sharon Finder APP is designed to simplify the management of NDI devices by retrieving their current IP addresses and enabling remote control and monitoring via a web server. Provides a centralized interface for managing the settings and monitoring the performance. |



Contents

| 1. Product Introduction | 06 |
|---------------------------------------|----|
| 2. Interface | 07 |
| 3. Components | 08 |
| 4. Dimensions | 09 |
| 5. Configuration Structure | 09 |
| 6. Configuration Overview | 11 |
| 7. Operation Descriptions by Location | 12 |
| 7.1 Operating Status | 12 |
| 7.2 Front Dial Operation | 12 |
| 7.3 Main Menu Configuration Items | 13 |
| 7.4 INPUT Submenu and Settings | 14 |
| 7.5 ENCODER Submenu and Settings | 15 |
| 7.6 RECORDER Submenu and Settings | 16 |
| 7.7 ETHERNET Submenu and Settings | 16 |
| 7.8 SYSTEM Submenu and Settings | 17 |



1. Product Introduction

N DOR can encode video up to 4K 30p via HDMI input or up to 1080P60 via 3G-SDI input into multi-protocols such as NDI HX3/NDI HX2/SRT/RTMP, for remote transmission and live streaming or recording. A 2.7-inch LCD is mounted on the front, providing output video, audio Level Meter, and input/output resolution information.

Product Features

- ① 2.7inch TFT LCD Display
- 2 Balanced Audio input
- ③ External TALLY control (3.5mm Phone Jack)
- ④ Output resolution and scaling function
- 5 USB, SD Card supports recording
- 6 Features a ¼ Inch female thread to mount device on to the camera body





2. Interface



< FRONT VIEW >

1 USB

- Recording MP4 to USB storage.
- (2) 2.7-inch LCD Display
 - Displays output video, HDMI/SDI input modes, input resolution, output resolution, and displays audio level meter and recording status.
- (3) One-Click Setting Button
 - Used for IP configuration, output resolution settings, encoding settings, and audio settings.





- (1) DC POWER : DC Power input (DC +7 to +18V)
- 2 ON/OFF Switch : DC Power ON/OFF switch
- ③ Ethernet: Ethernet Gigabyte Port (RJ-45 Connector)/PoE+
- ④ SD CARD : Micro SD Recording (Micro SD Connector)
- (5) TALLY : External TALLY control signal (3.5mm Phone Jack)
- 6 HDMI Input : HDMI video input Port (HDMI Connector)
- ⑦ SDI Input : SDI video input Port (BNC Connector)
- (8) Audio Input : Balanced audio Input L/R 2 Port (1/4" Stereo Jack)

3. Components

(2) AC to DC Adapter





③ An AC Plug per each country above.



4. Dimensions

Video Input

HDMI Input: (HDMI) x 1

- HD : 1080p30/1080p29.97/1080p25/1080p24/1080p23.98/ 1080i60/1080i59.94/1080i50/720p60/720p59.94/720p50
- Full HD : 1080p60/1080p59.94/1080p50
- UHD: 2160p30

SDI Input: (BNC 75Ω) x 1

- HD : 1080p30/1080p29.97/1080p25/1080p24/1080p23.98/ 1080i60/1080i59.94/1080i50/720p60/720p59.94/720p50

- Full HD : 1080p60/1080p59.94/1080p50

Audio Input

- 2x Balanced Audio (1/4" Stereo Jack)

Video Output

Encoding

- H.264, H.265(HEVC)

Stream

- NDI HX2, NDI HX3, SRT, RTMP

Ethernet: (Gigabit) x 1

- 10M/100M/1000M RJ45 (PoE supported 802.3af)

Recoding

USB PORT: 1x USB 2.0 Type A

SD CARD : 1x Micro SD

Display

2.7" TFT-LCD Display

Electrical

Power Input: DC +7 to +18V

Power Consumption: 6W(max.)

Operation Temperature: 0~45°C

PoE+

Physical

Dimension: 44(H) X 143.4(W) X 89.9(D), include connector

Weight: 0.42 kg (typ.)



5. Configuration Structure





6. Configuration Overview

| Submenu | Settings | Options | Function |
|----------|--------------|---|---|
| | VIDEO IN | HDMI SDI | Select video input port (*When selected, the audio input port is automatically converted to the appropriate input port.) |
| INPUT | AUDIO IN | HDMI SDI EXT | Select audio input port |
| | PATTERN | BLACK WHITE BLUE COLORBAR | Select a color/pattern to be displayed when there is no input. |
| | VID CODEC | H264 HEVC | Select video output codec method. |
| | VID BTR | 1,000 kbps ~ 60,000 kbps | Video Output bitrate settings. |
| ENCODER | AUD BTR | 64 Kbps 96 Kbps 128 Kbps 192 Kbps 256 Kbps | Audio Output bitrate settings. |
| | VID RES | 3840x2160 1920x1080 1280x720 1024x576 640x360 | Video output resolution settings. |
| | VID FPS | 10 fps ~ 60 fps | Video output frame rate set |
| | VID GOP | 1 ~ 120 | Set output video key interval. |
| | VID RC | VBR CBR CVBR | Set output video control rate. |
| PECOPDER | STATUS | START STOP | Select "START" to record. Select "STOP" to stop recording. |
| RECORDER | STORAGE | SD CARD USB | Select storage location. |
| | MODE | DHCP Static | Set IP mode. |
| ETHEDNET | IP | 000.000.000.000 | IP address setting, 0 ~ 255 (Can be set in Static mode) |
| ETHERNET | SM | 000.000.000.000 | Set subnet mask address, 0 ~ 255 (Can be set in Static mode) |
| | GW | 000.000.000.000 | Set gateway address, 0 ~ 255 (Can be set in Static mode) |
| QVQTEM | LOAD DEFAULT | YES NO | Factory reset will proceed if YES is selected. |
| SYSTEM | REBOOT | YES NO | Reboot proceeds when YES is selected. |



Operation Descriptions by Location

7.1 Operation Status



Front Dial Operation

| Turn to the right | Turn to the left | Press for less than 2 seconds | Press for longer than 2 seconds |
|--|--|----------------------------------|------------------------------------|
| Turning the knob allows you to scroll through the list of options/selection (from top to bottom) | Turning the knob allows you to scroll through the list of options/selection (From bottom to top) | Select option | ESC |









7.4 INPUT Submenu and Settings



| Settings | Function | | | |
|----------|---|--|--|--|
| VIDEO IN | -HDMI: HDMI audio input -SDI: SDI video input | | | |
| AUDIO IN | -HDMI: HDMI Embedded audio input -SDI: SDI Embedded audio input -EXT: External audio input (1/4" Stereo Jack) | | | |
| PATTERN | -BLACK: Displays BLACK screen when there are no video inputs. -WHITE: Displays WHITE screen when there are no video inputs. -BLUE: Displays BLUE screen when there are no video inputs. -COLORBAR: Displays COLORBAR when there are no video inputs. | | | |



7.5 ENCODER Submenu and Settings



| Settings | Functions | | | |
|-----------|--|--|--|--|
| VID CODEC | Sets the output video codec value | | | |
| VID CODEC | Displays output video codec value information (fixed as "AAC") | | | |
| VID BTR | Sets the output video bitrate value | | | |
| AUD BTR | Sets the output audio bitrate value | | | |
| VID RES | Sets the output video resolution | | | |
| VID FPS | Sets the output video frame rate | | | |
| VID GOP | Sets output video keyframe interval | | | |
| VID RC | Sets output video rate control settings | | | |



7.6 RECORDER Submenu and Settings



| Settings | Functions | | |
|----------|--------------------------|--|--|
| STATUS | Select START/STOP. | | |
| STORAGE | Select Storage location. | | |

7.7 ETHERNET Submenu and Settings



| Settings | Functions | | | | |
|----------|--|--|--|--|--|
| Mode | Select IP setting method. Static: Use static IP DHCP: Use automatic IP | | | | |
| IP | IP address settings. (Only used in Static mode) | | | | |
| SM | Subnet mask address setting. (Only used in Static mode) | | | | |
| GW | Gateway address settings. (Only used in Static mode) | | | | |



7.8 SYSTEM Submenu and Settings



| Settings | Functions | | | |
|--------------|--|--|--|--|
| VERSION | Displays Firmware information | | | |
| IP | Displays IP information | | | |
| LOAD DEFAULT | Factory reset settings (Factory reset will proceed if YES is selected.) | | | |
| REBOOT | Reboots system (Reboot will proceed if YES is selected.) | | | |



SHARON FINDER

SHARON Finder allows you to discover Salrayworks NDI devices on the same network and find their IP addresses, MAC addresses, change their hostname or IP settings, and restart the devices. It also enables resetting the web server password. By clicking on the IP address, you can access the web server.

| Devices | | | G |
|-------------|--|--|--|
| HOST | IP | MAC | ACTION |
| N DOR 1 | 192.168.0.219 🗸 | e8:eb:1b:37:dd:11 | ۰ ک |
| N DOR 1 | 192.168.0.108 🗸 | d8:47:8f:91:16:27 | 🌣 🕑 🕶 |
| | SHARO | Rows per page: 10 - | 1-2 of 2 < > |
| WINDOW Vers | sion ayworks.com/e hp?bo_table=d =108 | MAC Version http://www.salr eng/bbs/board. download≀_i 2 | ayworks.com/ php?bo_table= d=107&page= |
| | Login | | |
| | ID | | |
| | Please enter password | d | |
| | | OK CANC | |
| | | | |

The default password is fixed as ID: admin and PW: admin



FIRMWARE SYSTEM **VIDEO / AUDIO** H.264 1920x1080@60fps 8000Kbps HOST : vonego VIDEO HDMI SDI IP: 192.168.0.108 AAC 48000Hz Stereo 96Kbps AUDIO HDMI SDI EXT CPU **NETWORK** CPU: 10% Rx: 204.4 KBps, Tx: 8.6 MBps CPU0 _____ CPU1 _____ CPU2 Rx Tx 100 30MBps 80 24 16 20 0 0

You can monitor the status of NDOR and adjust the video or audio inputs

You can select the video and audio encoding settings menus

| номе | | NDI® | RTMP/SRT | RECORDING | NETWORK | FIRMWARE | ACCOUNT | LO | GOUT |
|------|---------------------------|-------------|----------|-----------|---------|--------------------------|---------|----|------|
| | | | | | | | | | |
| | VIDEO | | | | ļ | AUDIO | | | |
| | Codec H.264 (AVC) | | | | Ţ | Codec AAC | | ÷ | |
| | Profile Main profile | | | | ÷ | Samplerate (Hz) 48000 | | • | |
| | Resolution 1920 x 1080 | | | | • | Bitrate (Kbps) 96 | | - | |
| | Bitrate (Kbps) 8000 | | | | | | | | |
| | Framerate 60 | | | | | | | | |
| | Gop 10 | | | | | | | | |
| | Rate Control CBR (consta | nt bitrate) | | | • | | | | |
| | | | | | | | | | |
| | | | | | | | | | |



| These are the features and settings according to the NDI standards. | |
|---|--|
|---|--|

| номе | ENCODER | NDI® | RTM | P/SRT | RECORDI | NG NI | ETWORK | FIRMWARE | ACCOUNT | r | | | LOGOUT |
|------|------------------------|---------|-----|-------|---------|-------|--------|---------------|---------|---|--|---|--------|
| | | | | | | | | | | | | | |
| | NDI Enable/D | Disable | | | | | | NDI Discovery | Server | | | | |
| | ee Enable | | | | | | | Diable | | | | | |
| | | | | LY | | | | Server IP | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | NDI Transmit | | | | | | | NDI Groups | | | | | |
| | | | | | | | | - Groups | | | | | |
| | ТСР | | UDP | | Multica | ist | | Public 🛞 | | | | × | |
| | Multicast netprefix | 2 | 39 | 255 | | | | | | | | | |
| | Multicast netmask | 2 | 55 | 255 | | | | | | | | | |
| | Multicast T | TL 1 | | | | | | | | | | | |
| | | | | LY | | | | | | | | | |
| | | | | | | | | | | | | | |

You can start streaming simultaneously by entering up to two streaming addresses, supporting RTMP or SRT streaming

| номе | ENCODER | NDI® | RTMP/SRT | RECORDING | NETWORK | FIRMWARE | ACCOUNT | LOGOUT |
|------|---------|------|-----------|-----------|---------|----------|---------|--------|
| | | | | | | | | |
| | | | Stream | Urls | | | | |
| | | | | | | | | |
| | | | Stream #1 | | | | | |
| | | | | | | | | |
| | | | Stream #2 | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |



You can record as MP4 video files to the storage space on a USB or SD card and copy the stored files from the USB to your PC over the same network via SAMBA.

| НОМЕ | ENCODER | NDI® | RTMP/SRT | RECORDING | NETWORK | FIRMWARE | ACCOUNT | LOGOUT |
|------|---------|------------------|------------------|------------------|---------|----------|---------|--------|
| | | | | | | | | |
| | | Recor | ding | | | | | |
| | | Select or | e of the storage | as below: | | | | |
| | | Select of SDC | : 1.98 GB / 16.1 | 0 GB (12.30% us | ed) | | | |
| | | O USB | : 1.29 GB / 16.0 | 0 GB (8.05% used |) | | | |
| | | | STOP | | AF | PPLY | | |
| | | | | | | | | |
| | | | | | | | | |

You can rename the device or reconfigure its IP address and settings.

| номе | ENCODER | NDI® | RTMP/SRT | RECORDING | NETWORK | FIRMWA | RE | ACCOUNT | | | LOGOUT |
|------|------------------|------|----------|-----------|---------|-------------|-----|---------|-----|-----|--------|
| | | | | | | | | | | | |
| | HOSTNAME | | | | | IP | | | | | |
| | Hostname NDOR | | | | | ee Dho | P | | | | |
| | | | | | | IP | 192 | 168 | | 117 | |
| | | | | | | Netmas k | 255 | 255 | 255 | | |
| | | | | | | Gatewa y | 192 | 168 | | | |
| | | | | | | | | | | | |

You can download and update to the latest firmware.

| номе | ENCODER | NDI® | RTMP/SRT | RECORDING | NETWORK | FIRMWARE | AC | COUNT | | LOGOUT |
|------|---------|------|--|---------------------|---------|----------|----|-------|--|--------|
| | | | | | | | | | | |
| | | | Firmware | Update | | | | | | |
| | | | Current ver Firmware: v1 Server: v1.0. | rsion 1.0.3 1 | | | | | | |
| | | | Select | file | | | | | | |